 



PTZ control operation instructions

Pan Tilt Rotation Control

Press the arrow keys in direction controlling interface, camera will be rotated as the direction of button, if release the button, camera will stop rotating, additionally, rotation speed can be adjusted by speed parameters, as shown below.

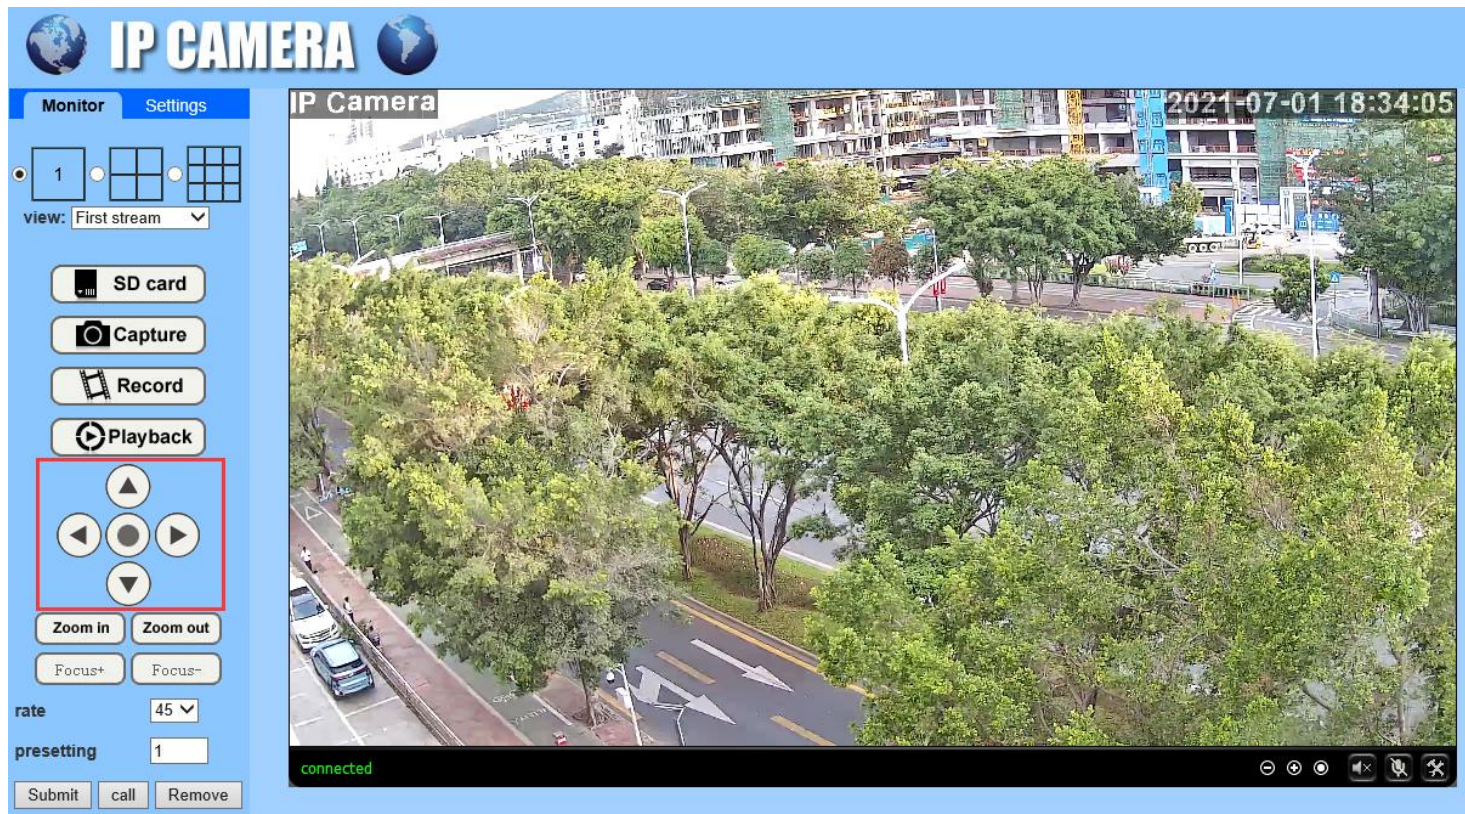


 In APP, control the camera rotation by sliding the phone screen or click the directional button.

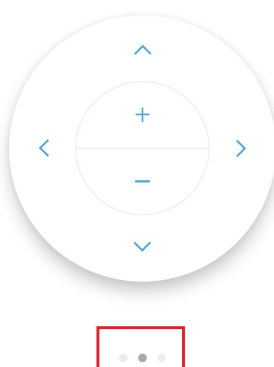


Zoom Control

Click "Zoom in" button, image will be magnified, click "Zoom out" button image will be minified, click "Focus in" and "Focus out", the focus can be adjusted manually, as shown below.

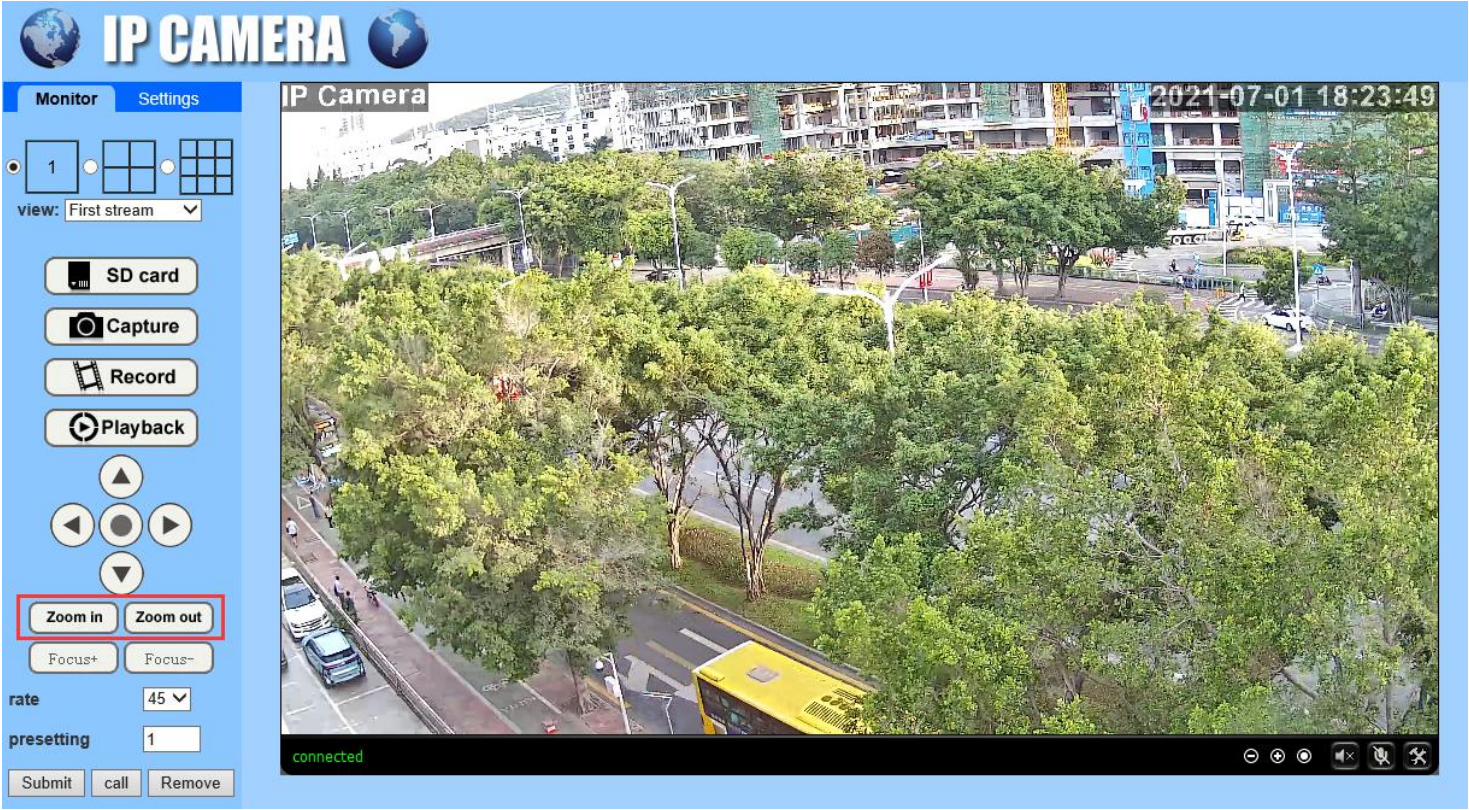

APP page.

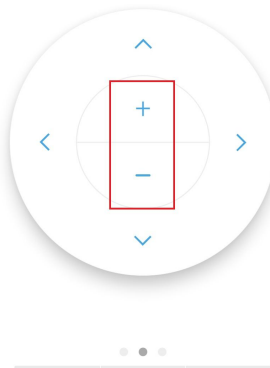


Preset Function


Preset settings: input preset point Number on presetting site, then click "Submit" button, this preset point will be set successfully, camera will record the current location.

Preset call: input preset point Number on presetting site, then click "call" button, this preset point will be called, camera will turn to recorded location.

Delete preset: input preset point Number on presetting site, then click "Remove" button, this preset point will be deleted.

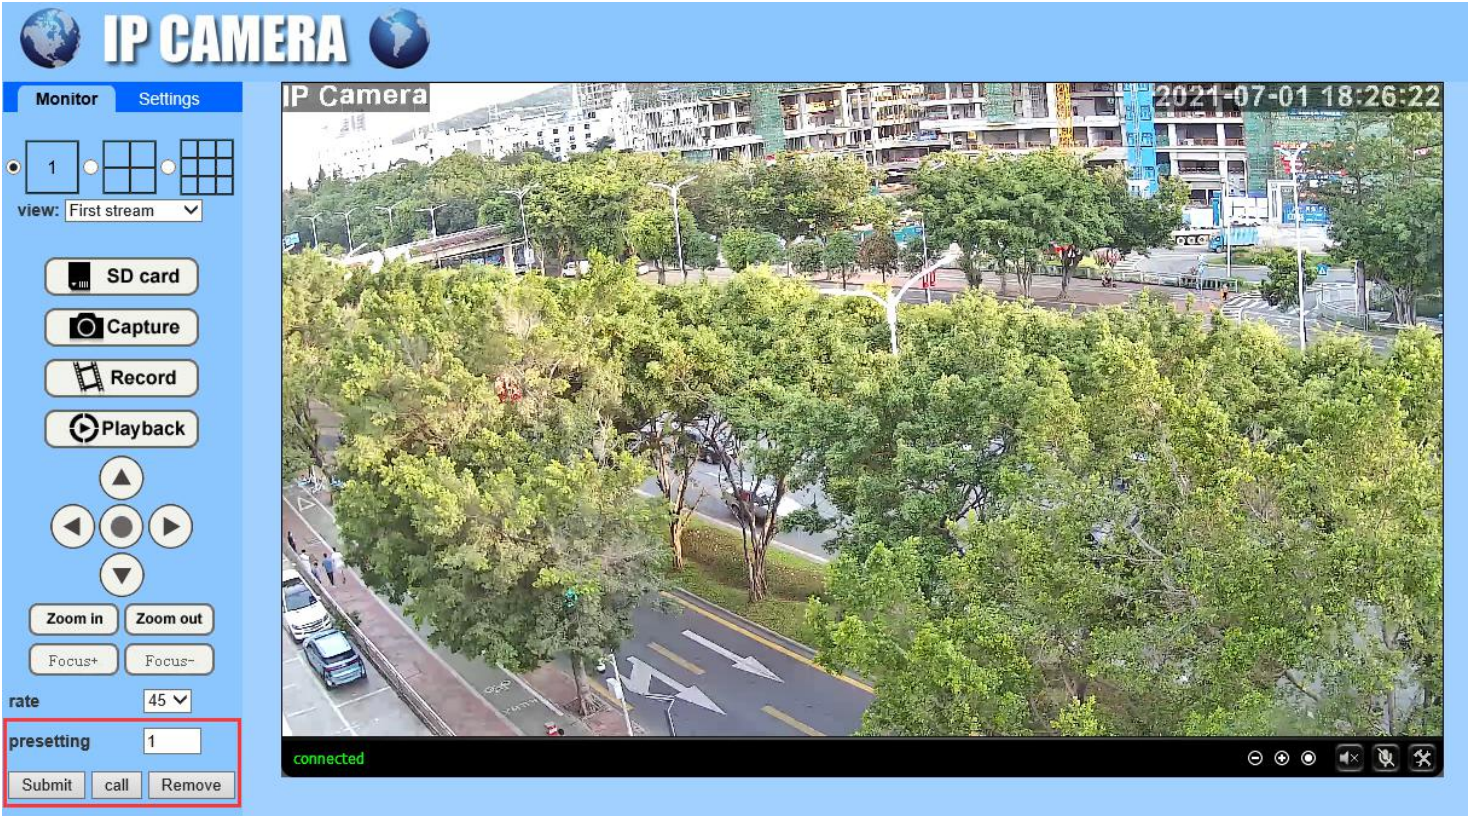

APP page.

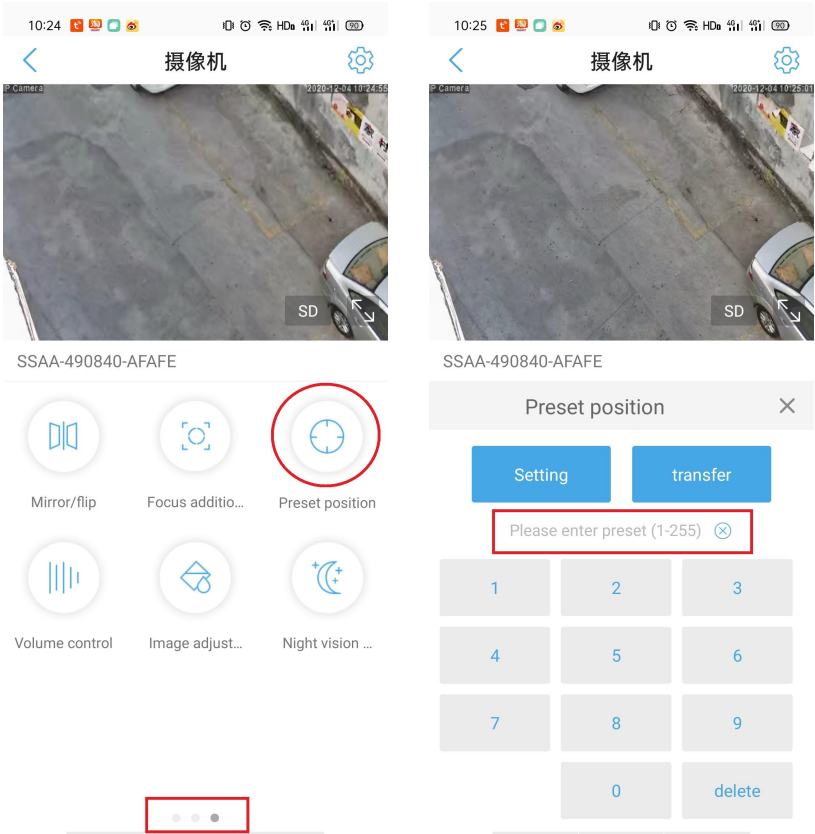

The following special presets are only used for the following 30x optical zoom PTZ dome cameras:



Set cruise

When you have set at least 3 preset points between 1-16, you can call special preset “38” to start cruising, the camera will rotate to the preset points 1-16 that have been recorded until the camera are manually controlled.

Call preset point 38: Start cruising.

Set 360° cruise

Set preset point 39: Start 360° cruise.

Set guard position

Set preset point 1: record the current position of the camera as the guard position, When the camera stops operating one minute, the camera will return to the guard position.

Delete preset point 1: stop the guard position function.

Humanoid tracking

Call preset point 233->203: Call 233 and call 203 within 5 seconds to turn on the humanoid tracking.

Call preset point 233->204: Call 233 and call 204 within 5 seconds to turn off the humanoid tracking.

Infrared light board control

Call preset point 81: The default work module, infrared light board and image automatically switch according to the day or night environment.

Call preset point 82: The infrared light board is always on and the image is black and white night vision.

Call preset point 83: The infrared light board is always off and the image is in color.

Others

Call preset point 34: Reset all preset point.